



# Sun King Solo Solar Lantern Hand Strap Replacement

This guide will show you how to replace the hand strap on the lantern.

Written By: Anna



## INTRODUCTION


Use this guide to replace a broken or damaged hand strap.

## Step 1 — Locate and Remove the Screws




- Place the lamp *LED side down* on a clean workspace.
- Remove the screws holding the casing together using a Phillips #1 Screwdriver.

## Step 2 — Separate the Device

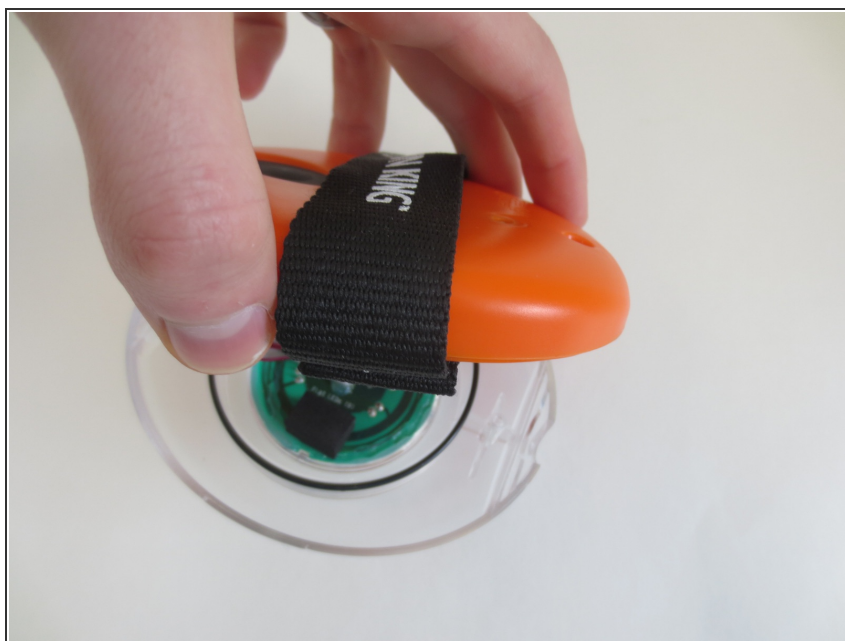


- Gently pull the two halves of the lamp apart.

### Step 3 — Remove Strap

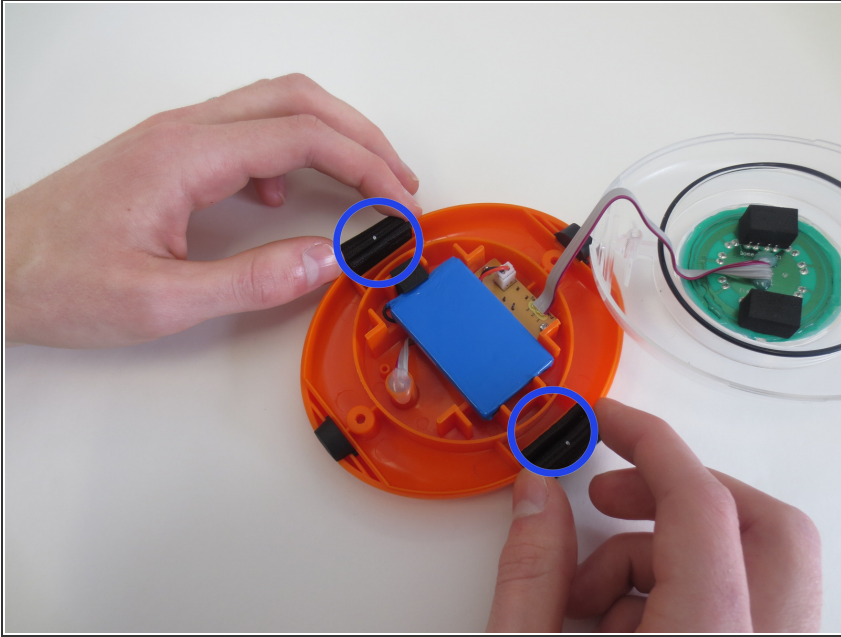

- Remove both ends of the strap from the orange casing by pulling up.

### Step 4 — Replace the Strap

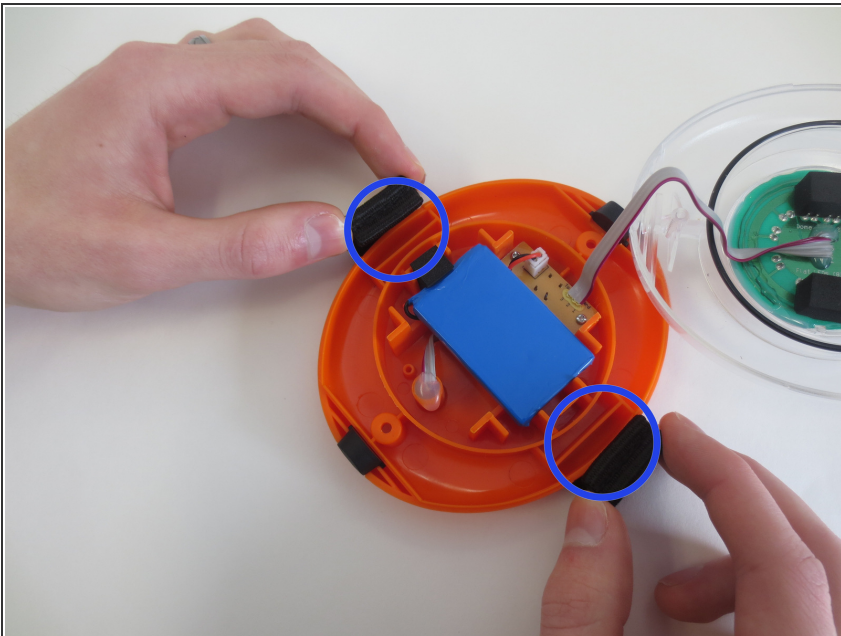

- Insert the ends of the new strap into the strap housing on both sides of the orange component.
- ⓘ Either strap housing (inner or outer) can be used to adjust the strap length.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 01:44:56 AM.